

## Concorde series Flood Light Shield Installation Instructions


**Step 1:** Use a screwdriver to remove the driver cover from the three screws on the side of the lens and the two screws on the left and right sides of the lens as shown below.

**Step 2:** Remove the light-shield and screw fittings, and align the screw holes at the bottom of the light-shield with the screw holes removed in the first step;


**Step 3:** Lock the light shield to the driver cover with the screws removed in the first step. Use the screws to lock the screw holes on the left and right sides of the front end of the light shield to the hole in the middle of the lens.

**Step 4:** The installation is complete.


**Remark:** The two module installation method is the same as above.

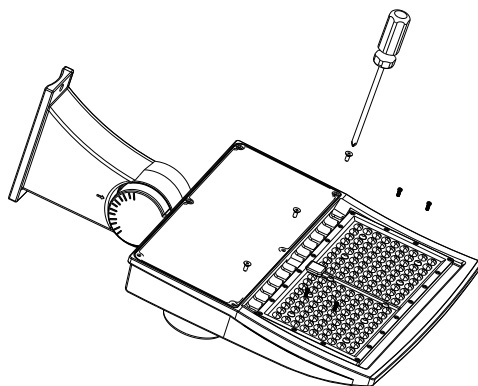


Step 1

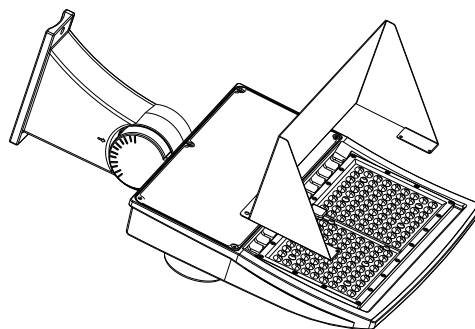

Step 2

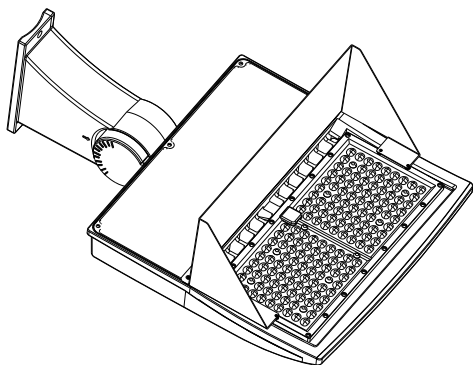

Step 4

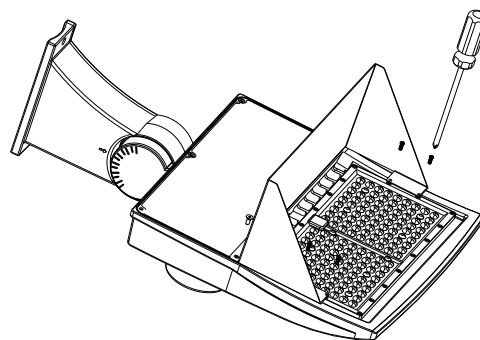

Step 3